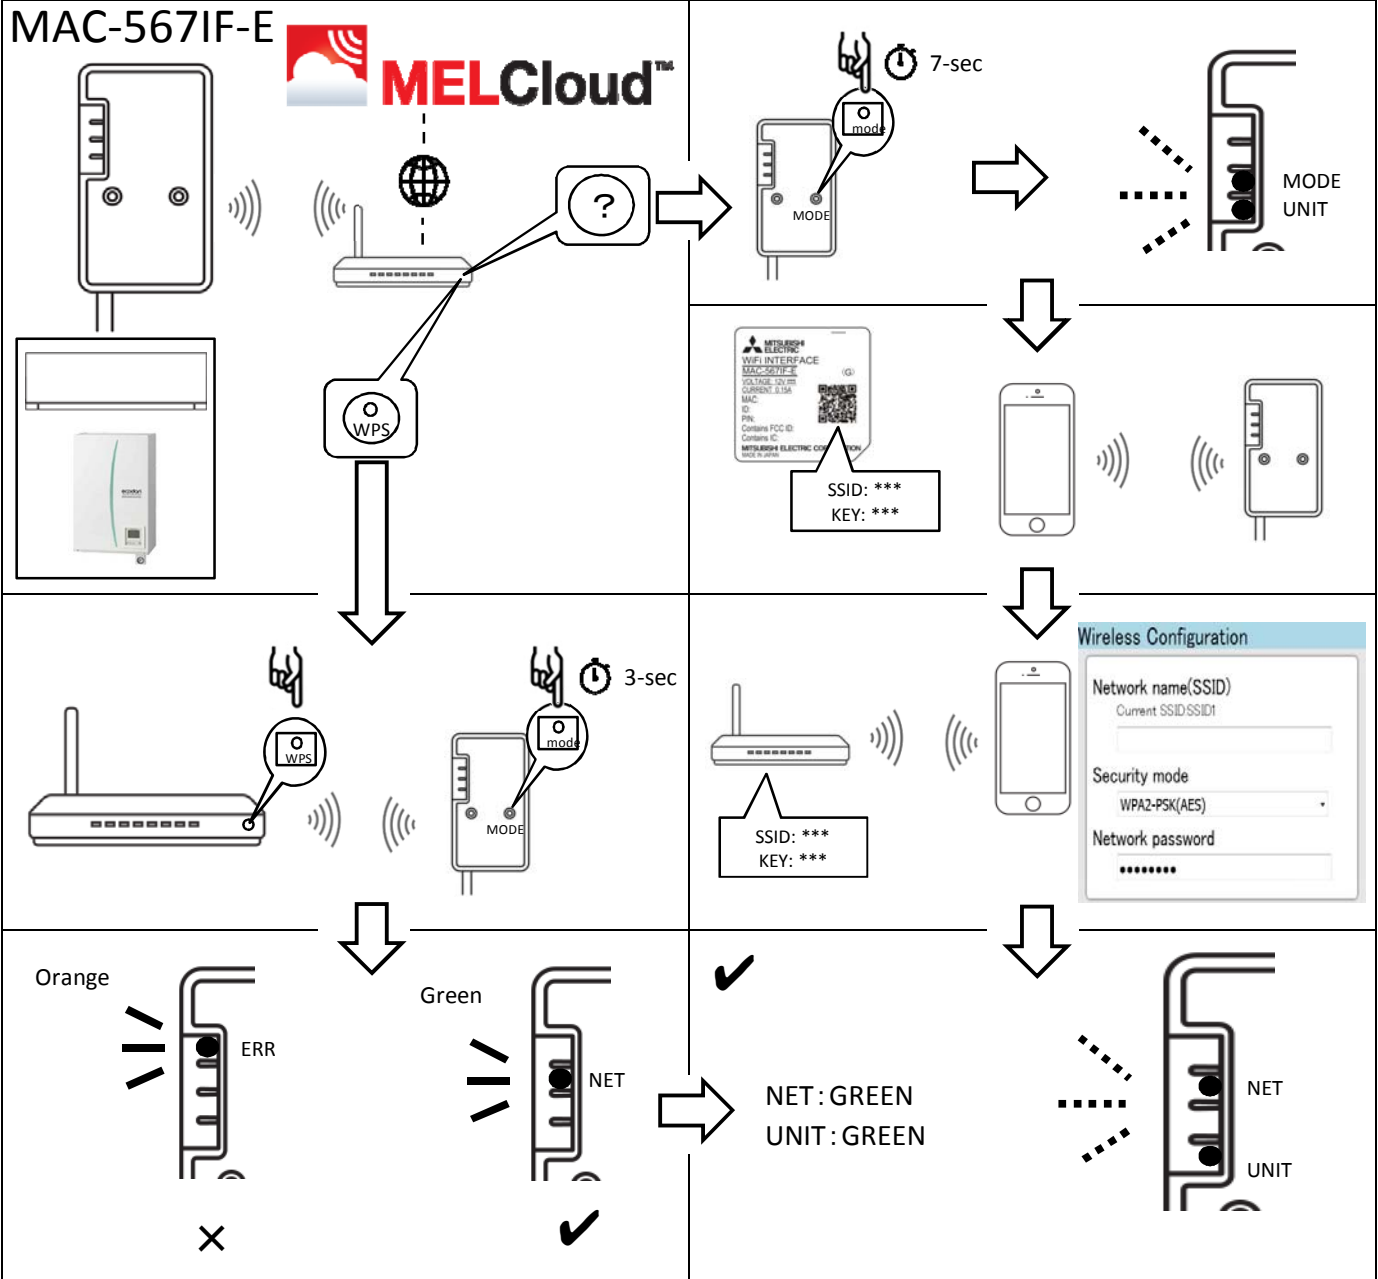
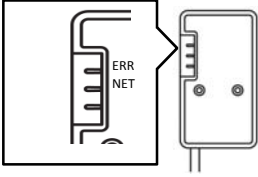

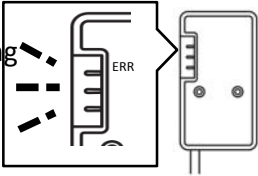

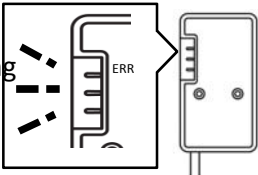

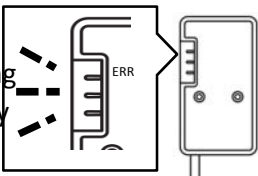

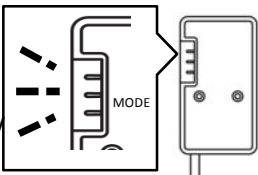
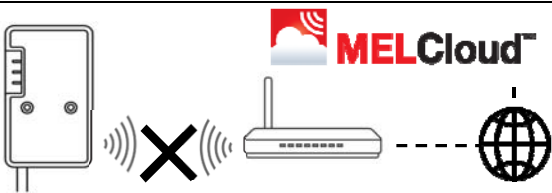
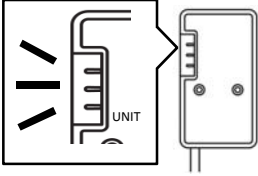



SET UP QUICK REFERENCE GUIDE



Troubleshooting

<p>ERR : OFF NET : OFF</p> 		<p>Pairing to the Router.</p>
<p>ERR : Blinking (0.2-sec interval)</p> 	 <p>IP address</p>	<p>Check DHCP settings of the Router. or Check IP address settings of the Wi-Fi interface.</p>
<p>ERR : Blinking (0.5-sec interval)</p> 	 <p>DNS</p>	<p>Check DNS settings of the Router. or Check DNS address settings of the Wi-Fi interface.</p>
<p>ERR : Blinking (Twice every 5 seconds)</p> 	 <p>Internet</p>	<p>Check if the Router is connected to the Internet.</p>
<p>MODE : Blinking (Once every 5 seconds)</p> 	 <p>The Wi-Fi interface is set to Access point mode</p>	<p>Push MODE switch of the Wi-Fi interface for 7 seconds. Try pairing the Router again if the Wi-Fi interface is not connected.</p>
<p>UNIT : ON or UNIT : OFF</p> 	 <p>Indoor unit</p>	<p>Check the connection to the indoor unit. or Update the firmware of the ATW.</p>