

12-2-2. PUMY-P112, 125, 140VKM4/YKM(E)4
PUMY-P200YKM2 (mm)

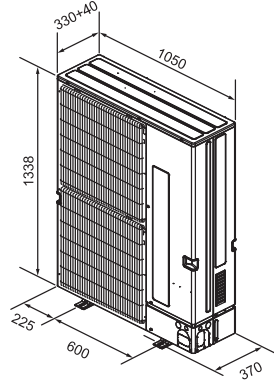


Fig. 12-2-14

12-2-2-1. Spacing individual PUMY-P-VKM4/YKM4(2)/YKME4
Follow Fig. 12-2-15~20 to space individual PUMY-P-VKM4/
YKM4(2)/YKME4 at the installation site. mm[in.]

12-2-2-2. Spacing grouped PUMY-P-VKM4/YKM4(2)/YKME4
Follow Fig. 4-2-21~26 to space grouped PUMY-P-VKM4/
YKM4(2)/YKME4 at the installation site. Leave 25 mm space or
more between PUMY-P-VKM4/YKM4(2)/YKME4 units. mm[in.]

<p>Fig. 12-2-15 Obstacles at rear only</p>	<p>Fig. 12-2-16 Obstacles at rear and above only</p>	<p>Fig. 12-2-21 Obstacles at rear or front only</p>	<p>Fig. 12-2-22 Obstacles at rear and above only</p>
<p>Fig. 12-2-17 Obstacles at rear and sides only</p>	<p>Fig. 12-2-18 Obstacles at front only</p>	<p>Fig. 12-2-23 Obstacles at front and rear only</p>	<p>Fig. 12-2-24 Parallel individuals arrangement</p>
<p>Fig. 12-2-19 Obstacles at front and rear only</p>	<p>Fig. 12-2-20 Obstacles at rear, sides and above only</p>	<p>Fig. 12-2-25 Parallel groups arrangement</p>	<p>Fig. 12-2-26 Stacked groups arrangement</p>

PUMY-SP-VKM, YKM/PUMY-P-VKM4, YKME4, YKM2