


PCFY-P40VKM-E

Unit : mm

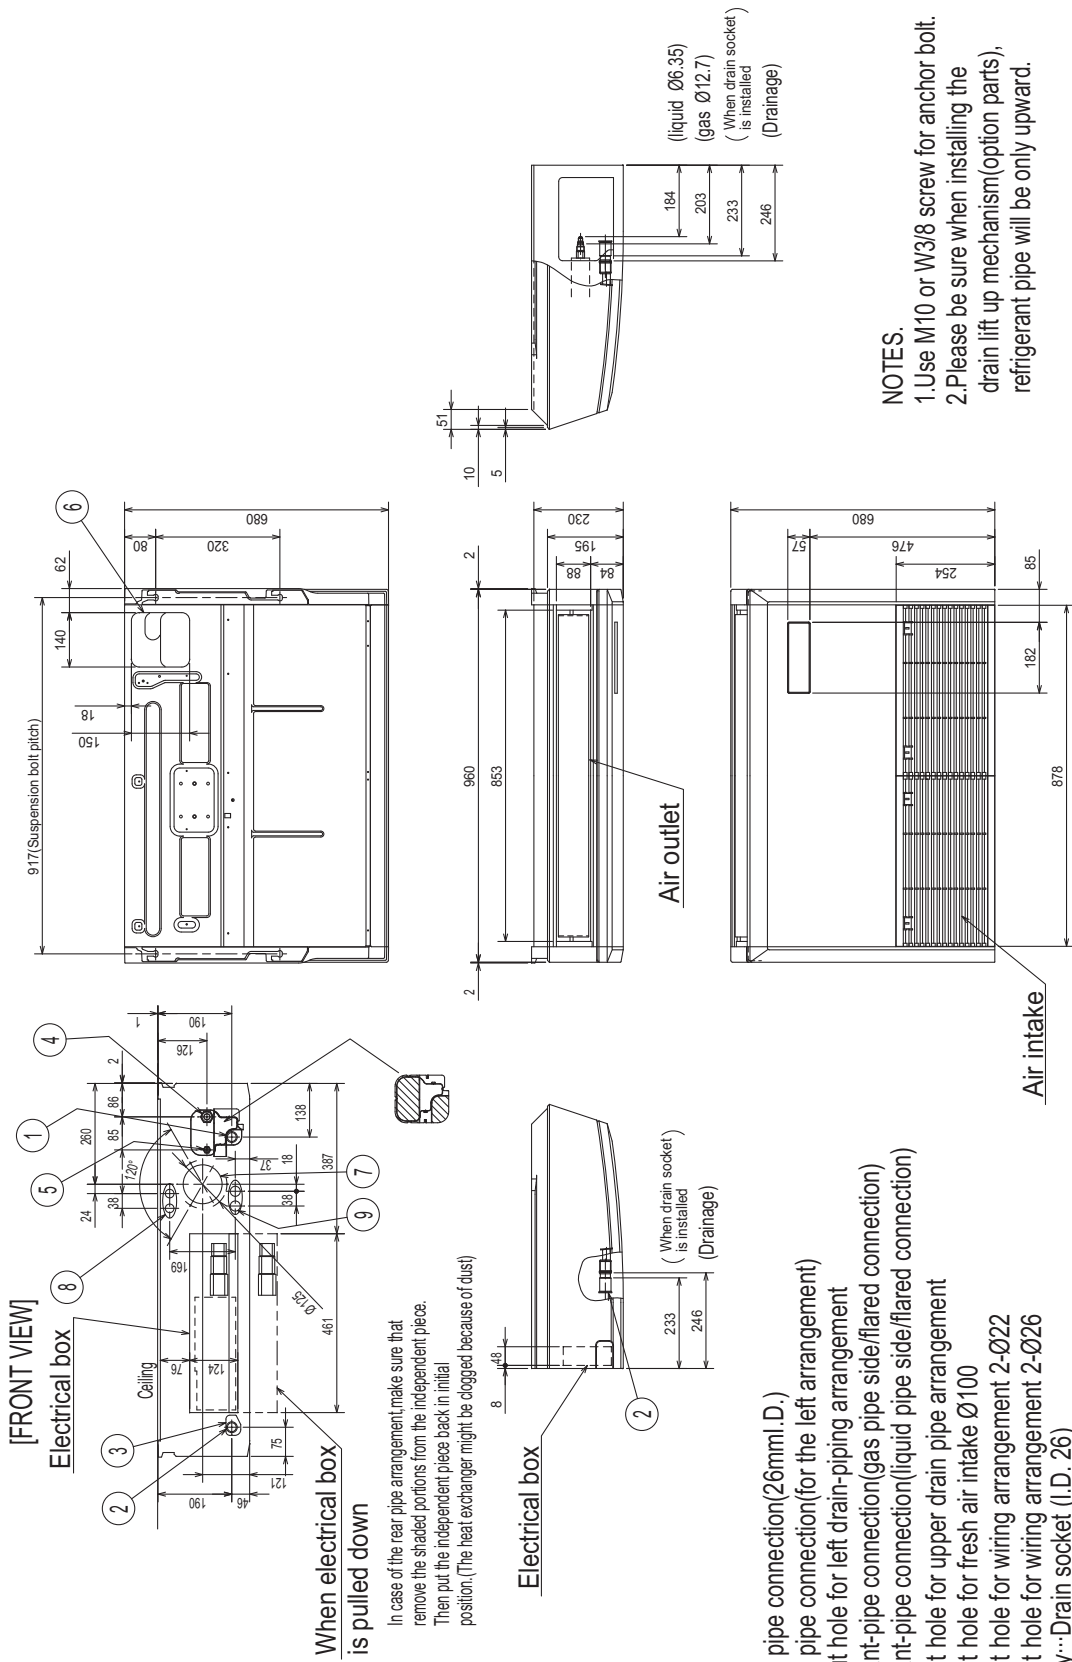

[FRONT VIEW]

Electrical box

Ceiling

When electrical box is pulled down

In case of the rear pipe arrangement, make sure that remove the shaded portions from the independent piece. Then put the independent piece back in initial position. (The heat exchanger might be clogged, because of dust)

Electrical box

(When drain socket is installed) (Drainage)

Air outlet

Air intake

(liquid Ø6.35)
(gas Ø12.7)
(When drain socket is installed)
(Drainage)


NOTES.

1. Use M10 or W3/8 screw for anchor bolt.
2. Please be sure when installing the drain lift up mechanism (option parts), refrigerant pipe will be only upward.

- ① Drainage pipe connection (26mm I.D.)
 - ② Drainage pipe connection (for the left arrangement)
 - ③ Knock out hole for left drain-piping arrangement
 - ④ Refrigerant-pipe connection (gas pipe side/flared connection)
 - ⑤ Refrigerant-pipe connection (liquid pipe side/flared connection)
 - ⑥ Knock out hole for upper drain pipe arrangement
 - ⑦ Knock out hole for fresh air intake Ø100
 - ⑧ Knock out hole for wiring arrangement 2-Ø22
 - ⑨ Knock out hole for wiring arrangement 2-Ø26
- Accessory... Drain socket (I.D. 26)

PCFY-P63VKM-E

Unit : mm

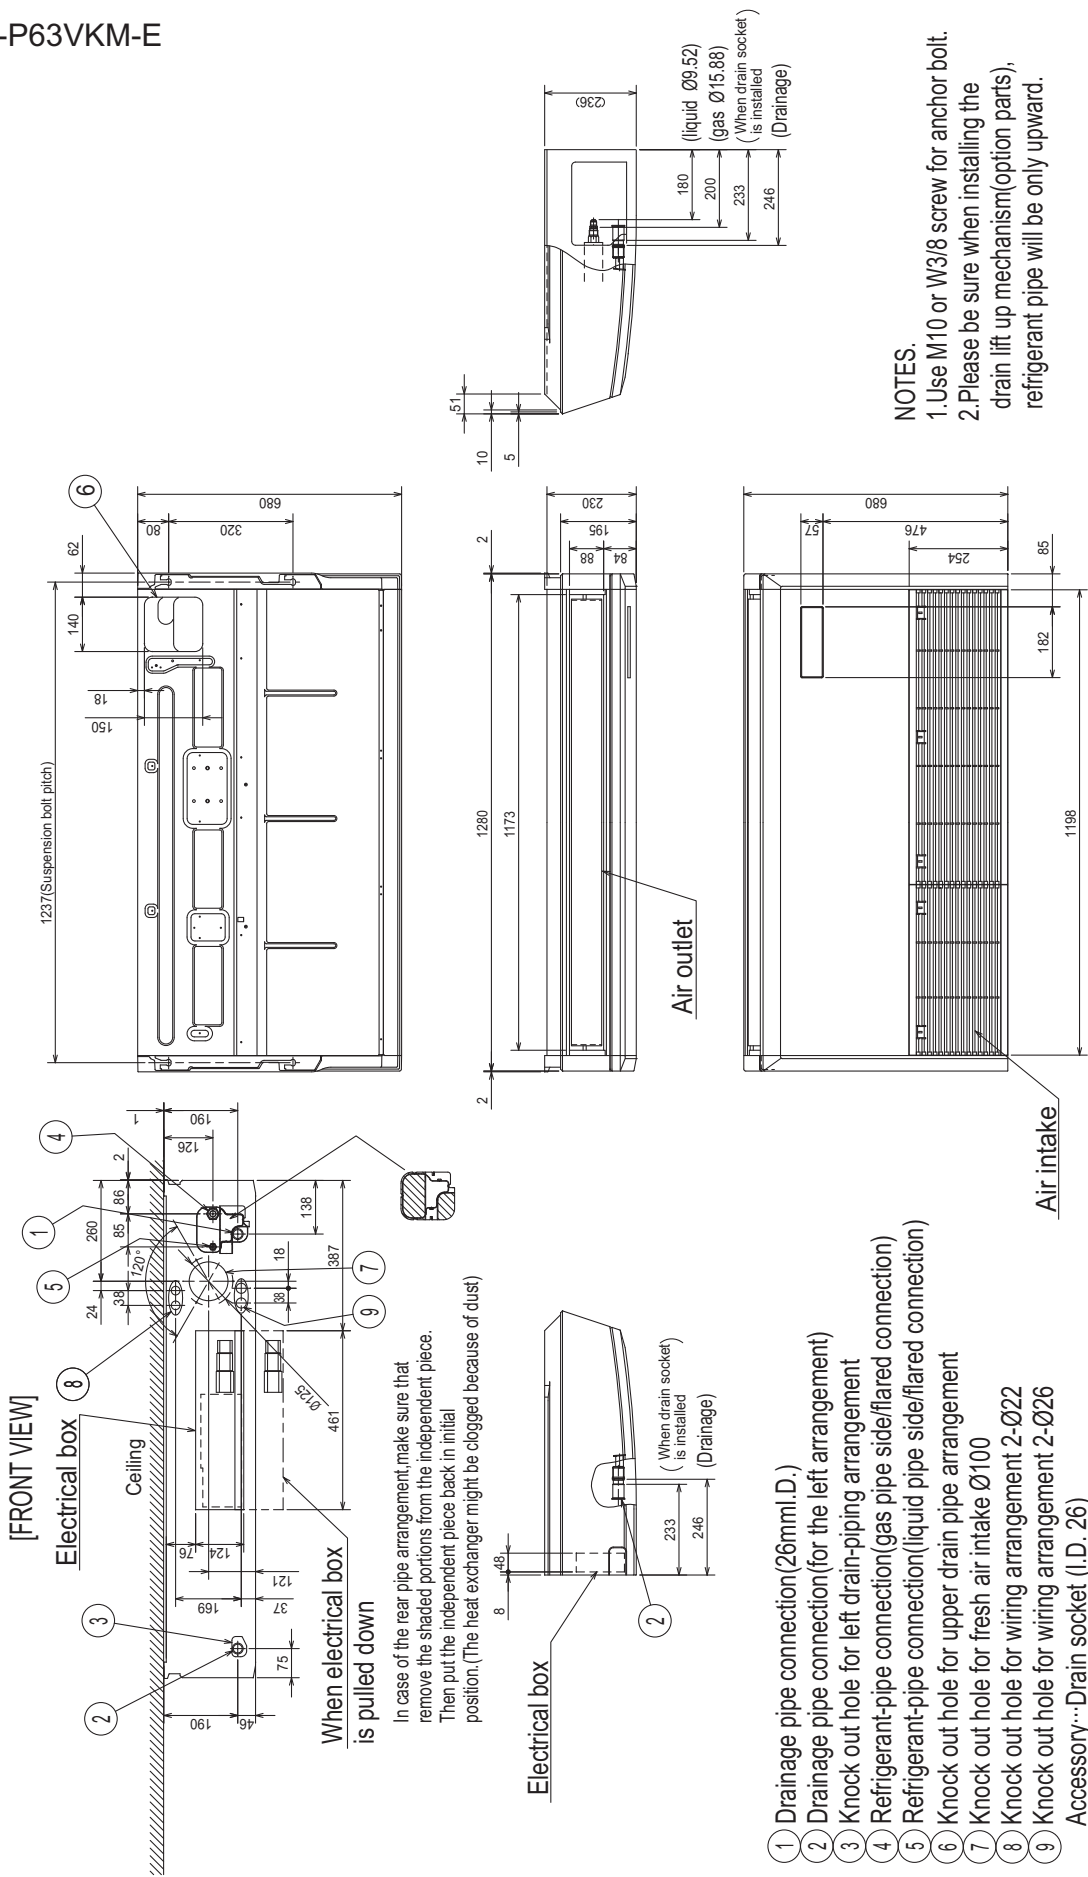

NOTES.
 1. Use M10 or W3/8 screw for anchor bolt.
 2. Please be sure when installing the drain lift up mechanism (option parts), refrigerant pipe will be only upward.


PCFY-P-VKM-E

PCFY-P100,125VKM-E





Unit : mm

- ⑥ Knock out hole for upper drain pipe arrangement
- ⑦ Knock out hole for fresh air intake Ø100
- ⑧ Knock out hole for wiring arrangement 2-Ø22
- ⑨ Knock out hole for wiring arrangement 2-Ø26
- Accessory...: Drain socket (I.D. 26)

- ① Drainage pipe connection(26mm.I.D.)
- ② Drainage pipe connection(for the left arrangement)
- ③ Knock out hole for left drain-piping arrangement
- ④ Refrigerant-pipe connection(gas pipe side/flared connection)
- ⑤ Refrigerant-pipe connection(liquid pipe side/flared connection)

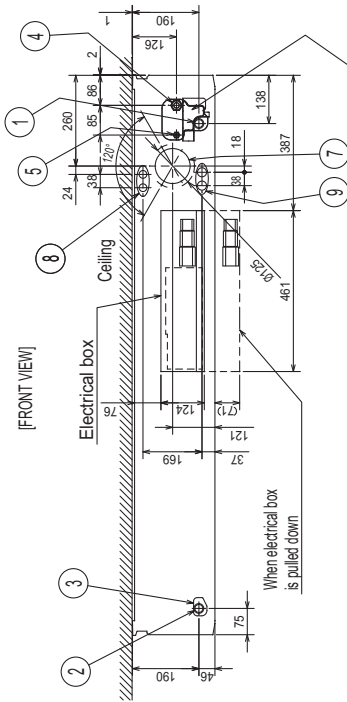

In case of the rear pipe arrangement, make sure that remove the shaded portions from the independent piece. Then put the independent piece back in initial position. (The heat exchanger might be clogged because of dust)

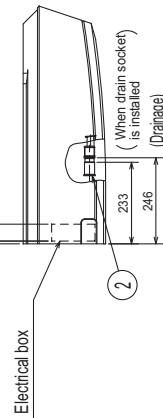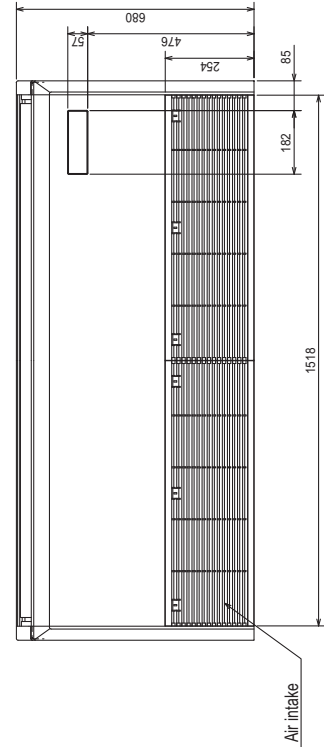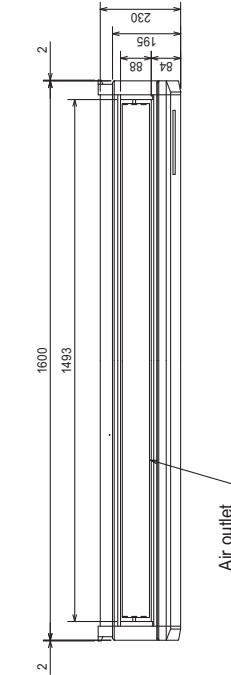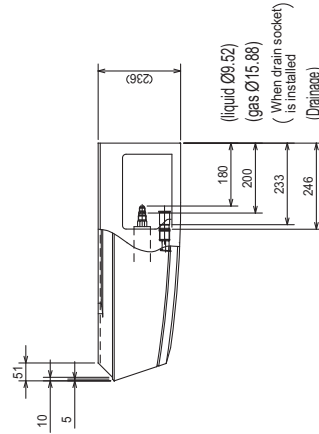

Use the current nuts meeting the pipe size of the outdoor unit.

- NOTES.
- 1. Use M10 or W3/8 screw for anchor bolt.
 - 2. Please be sure when installing the drain lift up mechanism(option parts), refrigerant pipe will be only upward.